

Torque Settings



Kubota V1505


Torque Setting:

Stage 1: 23Nm

Stage 2: 45Nm

Stage 3: 68Nm

Torque Sequence:

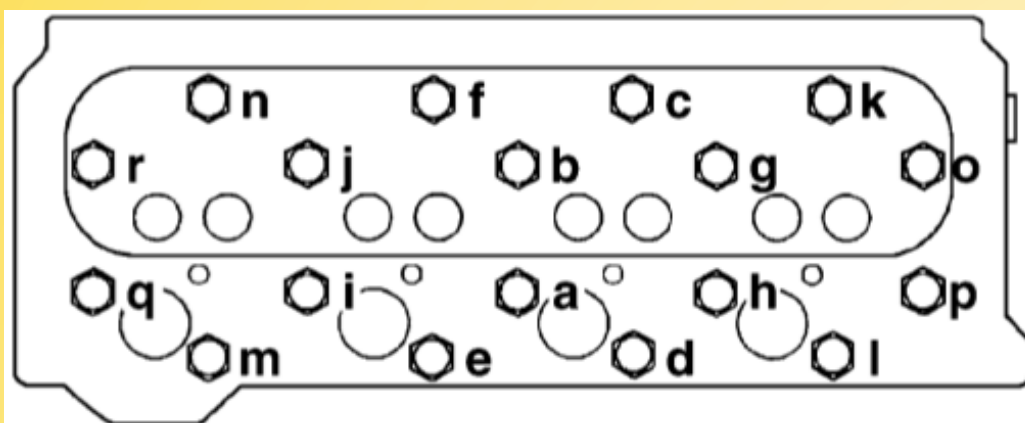

Notes:

All Threads, Heads & Washers must be lightly oiled.

Use an old head bolt with a groove cut down the thread to clean the threads in the block.